



Choose as your like grass panel

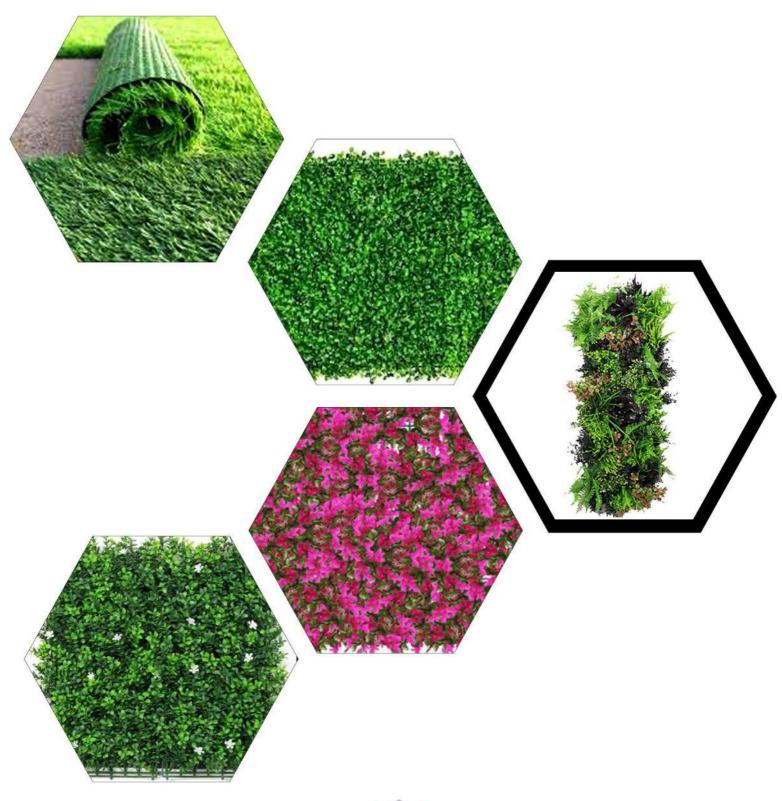







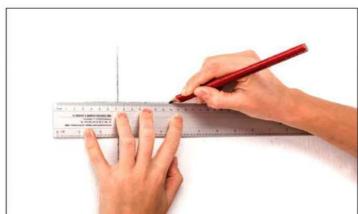

Create starting lines in the middle of your wall



Use Royal Wall Hybrid Adhesive



ApplyRoyalWall Hybrid Adhesive to the back of the Plank



Use Royal Wall Power Tape



Smooth Surface



Rough Surface







Peel the backing from the

Power Tape





Position the plank along your line



Press the planks into place

How to remove the Tape


Put a hair dryer on low heat and point it at the tape, holding it a few inches away. Move the hairdryer over the length of the tape evenly.

The heat will loosen the adhesive.

Slowly peel off the tape.

When the tape is gone, scrub off the sticky residue that remains with a soapy cloth.

How to install the Grass Panels

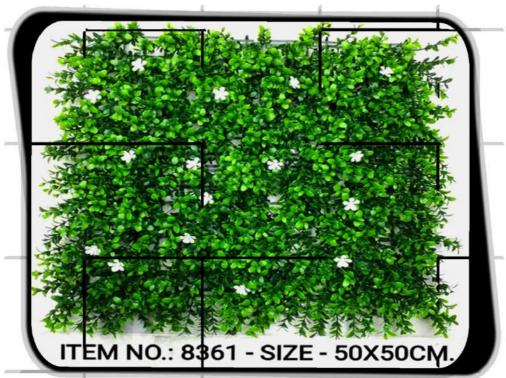

Let the grass panels acclimatize for 24 Hours.

Tools needed:



Make sure back of the grass panel and wall are clean and dry

